

HK4

NIR– In-Line measurement device
For continues measurement of organic components



Harrer & Kassen GmbH
Am Heschen 4 - 6
D - 75328 Schömburg - Langenbrand
Tel.: +49 (0)7084/9248-0
Fax: +49 (0)7084/9248-29
www.harrerkassen.com
info@harrerkassen.com

Description:

The HK4 is an NIR- (Near- Infrared) In- Line measurement device with state- of- the- art technology. Which can measure all organic components in solids like meat and in liquids with different viscosities like milk, oil.

The HK4 can be installed at pipelines, tanks / vessels, cutters, mincer, etc..

With only one measurement you can measure simultaneously valuable components like fat, protein, lactose, solids content, etc. for the dairy industry and fat, protein, collagen, water, etc. for the meat industry.


Through the modular construction (Sensor and evaluation unit are separate), the sensor can be installed at a difficult accessible places. This ensure the easy handling.

With the easy to use calibration function (calibration button), our customer can take spectra's at the device and read the internal stored spectra's with the calibration software.

Due to this function and the open calibration system our customers can expand independent an existing calibrations or create new calibrations.

Advantage:

- Stat-of-the-art NIR- Technology
- Real time measurement
- Production of consistently quality
- Early detection of fail production
- Easy to use software
- Open system:
 - existing calibration can be expanded
 - new calibrations can be created independent
- 10 Spectra's are evaluated per sec.
- Simultaneous measurement of up to 4 organic components
- Additionally is it possible to calculate 2 further components out of the measured components
- Color and distance independent measurement
- No moving parts in the optic, like filter wheel
- Low maintenance

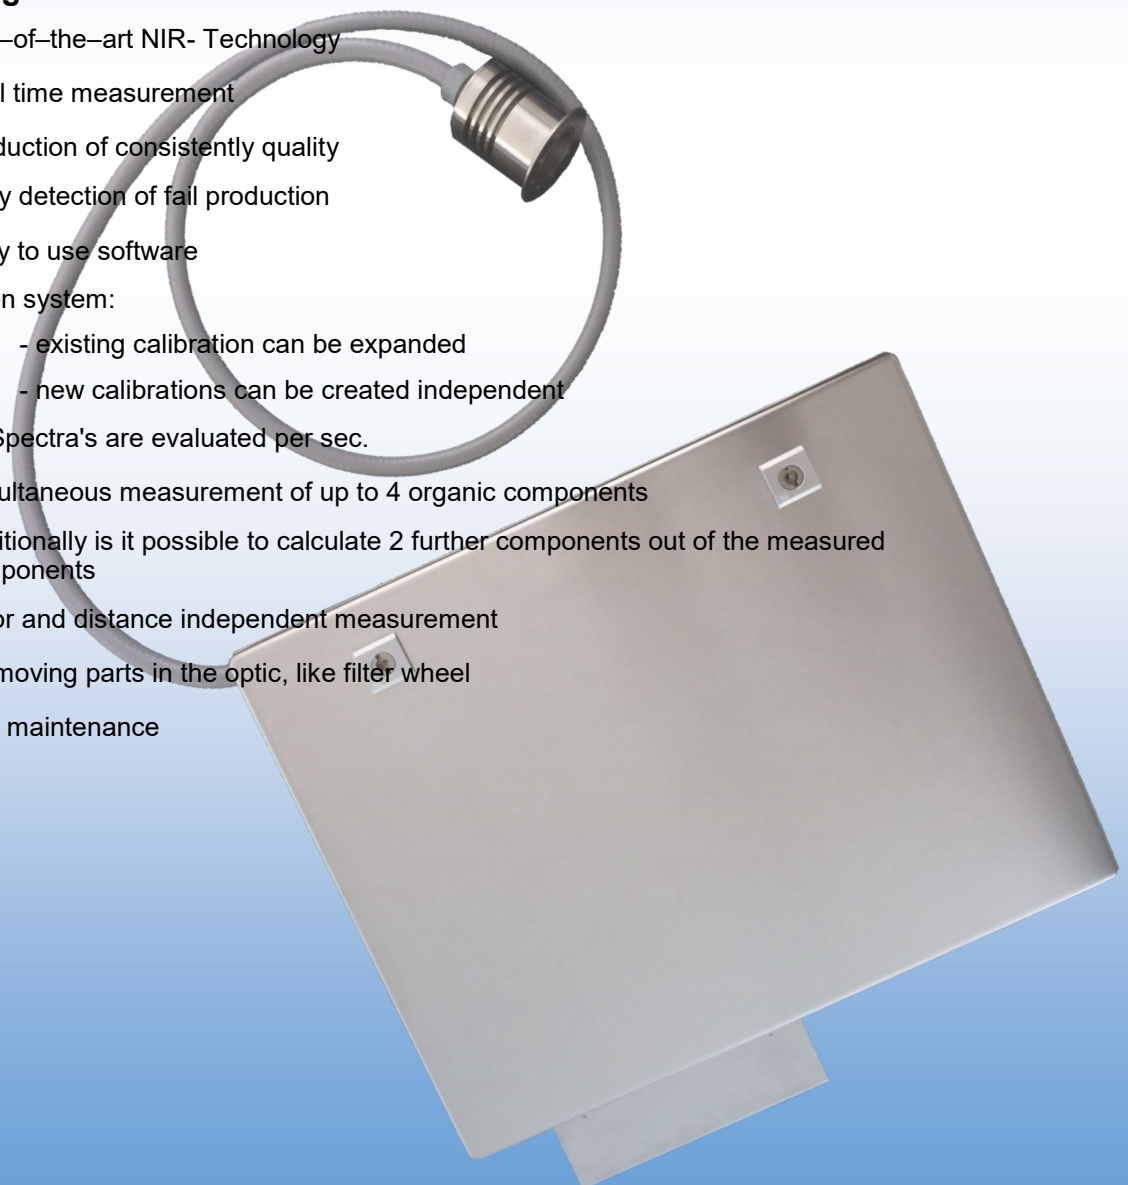



HK4 Standard




HK4 with extra cooling
For applications up to 40°C



Evaluation unit

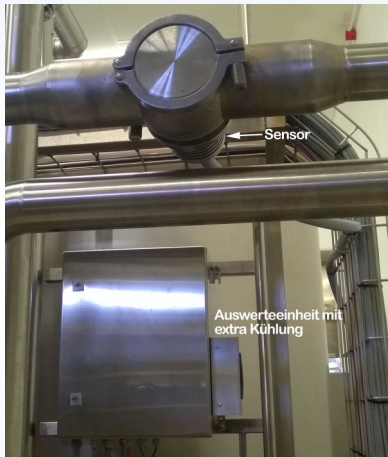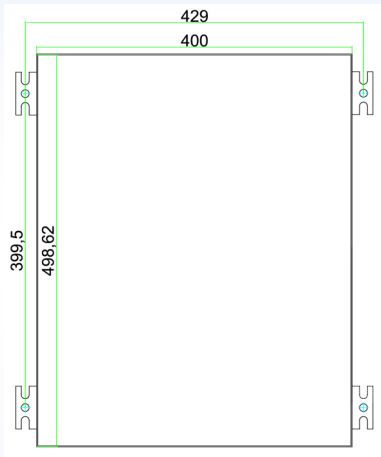


Sensor

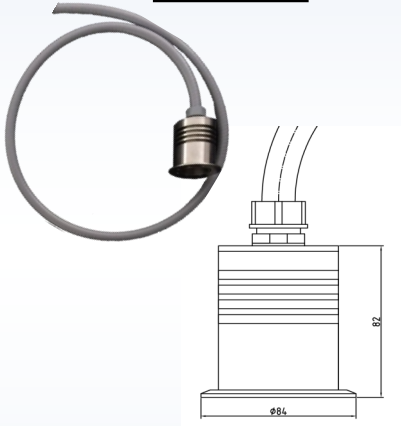

Internal construction HK4

Power supply
Serial-LAN-converter



Evaluation unit





Fiber optic



Optic



Terminal

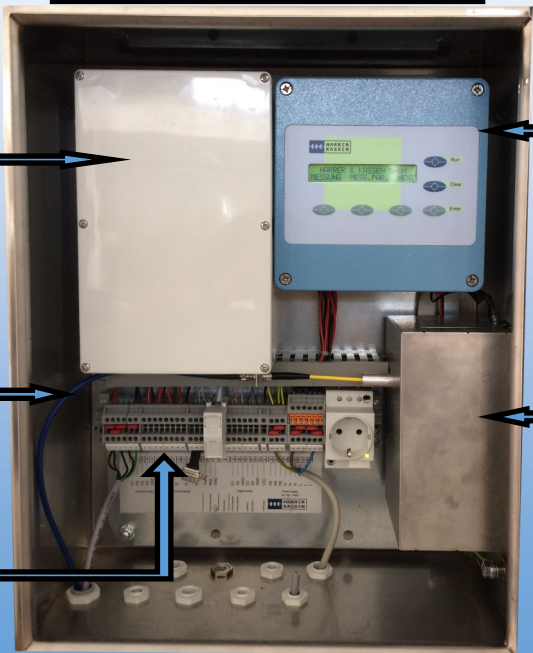

No moving parts in the optic:

The Harrer & Kassen GmbH uses in his HK4 and in his laboratory measurement devices an NIR (Near- Infrared) Diode- Array detector (Spectrometer) with thermoelectrically cooling, this is necessary for an optimum Signal-to-Noise ratio, even under rugged application conditions.

